




INSTALLATION INSTRUCTIONS


| | | |
|--------------------------------------------------------|------------------------------------|--------------------------------------|
| Accessory SPLASH GUARDS P/N 08P00-TM8-100 | Application 2010 INSIGHT | Publications No. All 40884 |
| | | Issue Date MARCH 2009 |

PARTS LIST


Left front splash guard

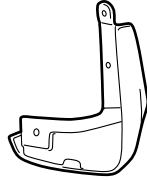


Right front splash guard

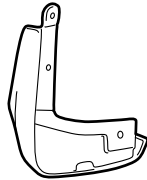

Left rear splash guard

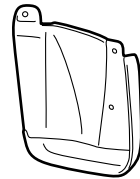

Right rear splash guard

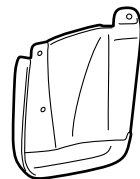


12 Self-tapping screws



2 Spring nuts



2 Screw grommets




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Stubby phillips screwdriver

Pushpin

Illustration of the Splash Guards Installed on the Vehicle

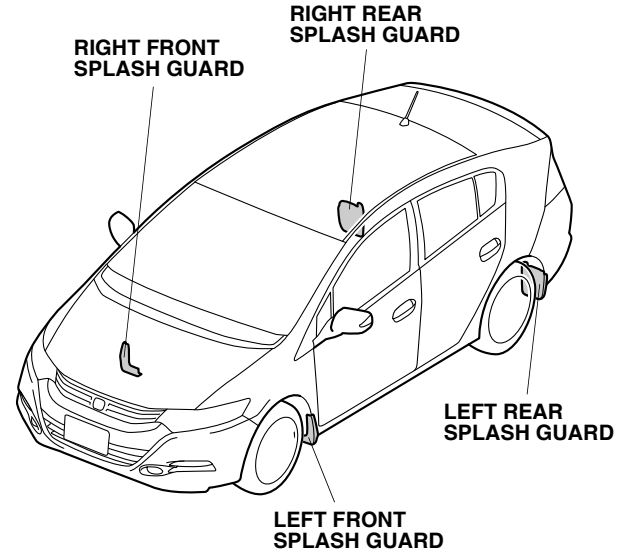

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- These instructions show the left splash guard being installed. The same procedure applies to installing the right splash guard.
- Clean and wax the areas to be covered with a high quality paste wax.

Installing the Front Splash Guards

1. Turn the steering wheel all the way counterclockwise.

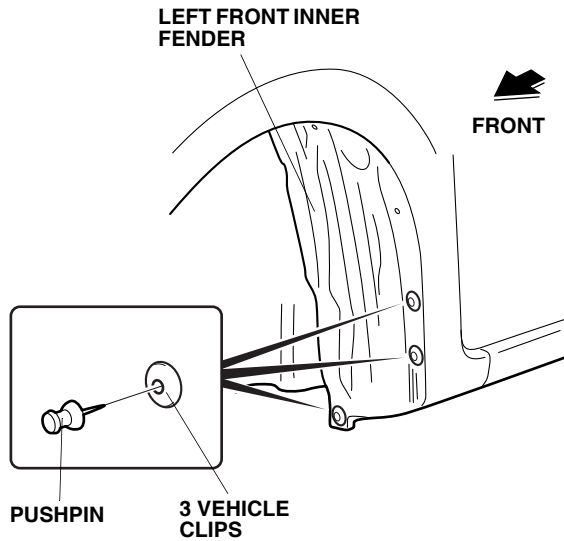


2. Using a pushpin, pierce the center of three vehicle clips on the left front inner fender.
3. Secure the left front splash guard with three self-tapping screws. Secure the self-tapping screws in the order **1** → **2** → **3**. If there is a gap between the left front splash guard and the vehicle, loosen the self-tapping screws, and re-tighten them again while adjusting the splash guard so that there is no gap.

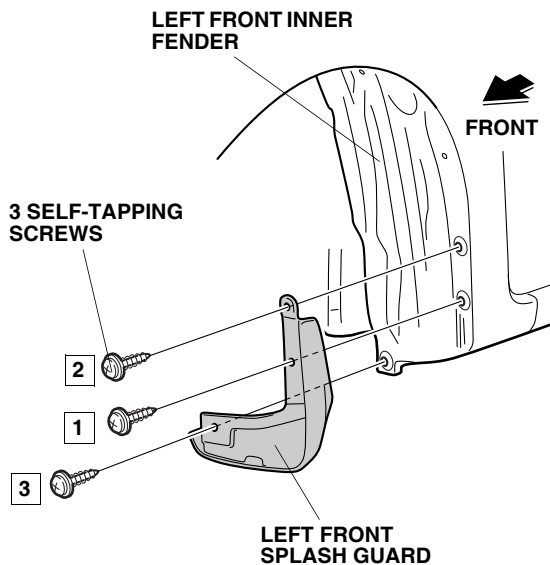


4. Turn the steering wheel all the way clockwise and repeat steps 1 thru 3 to install the right splash guard.

Installing the Rear Splash Guards

5. Remove one self-tapping screw from the rear bumper.

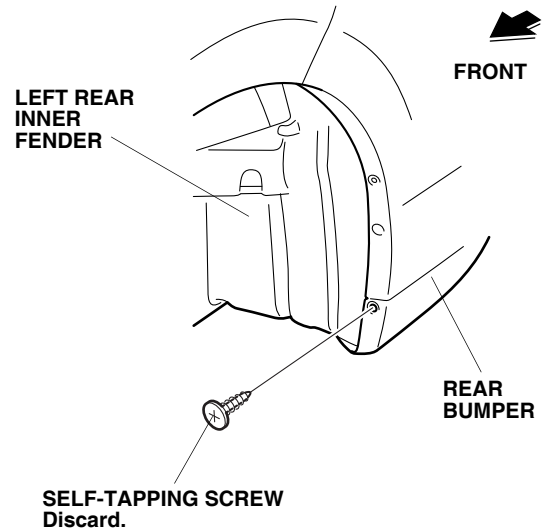


6. Using a pushpin, pierce the center of the dimple on the rear bumper.

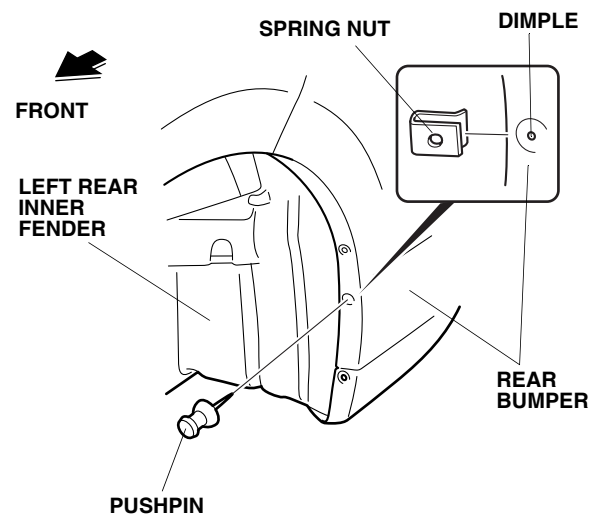


7. Install one spring nut over the pierced dimple on the rear bumper. Make sure to install the spring nut in the correct position and orientation.

8. Install one screw grommet into the hole on the left rear inner fender.

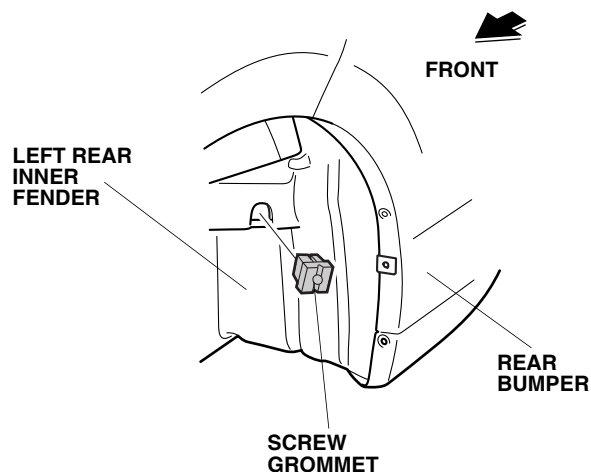

9. Secure the left rear splash guard with three self-tapping screws. Secure the self-tapping screws in the order **1** → **2** → **3**. If there is a gap between the left rear splash guard and the vehicle, loosen the self-tapping screws, and re-tighten them again while adjusting the splash guard so that there is no gap.

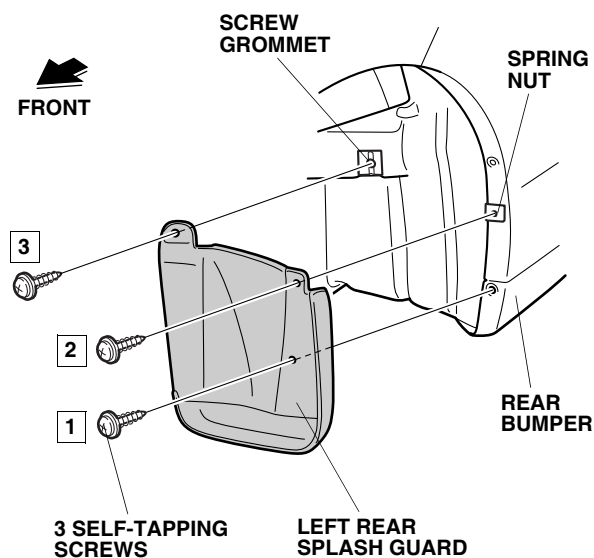

10. Repeat steps 5 thru 9 to install the right rear splash guard.